




E-Stop Recovery

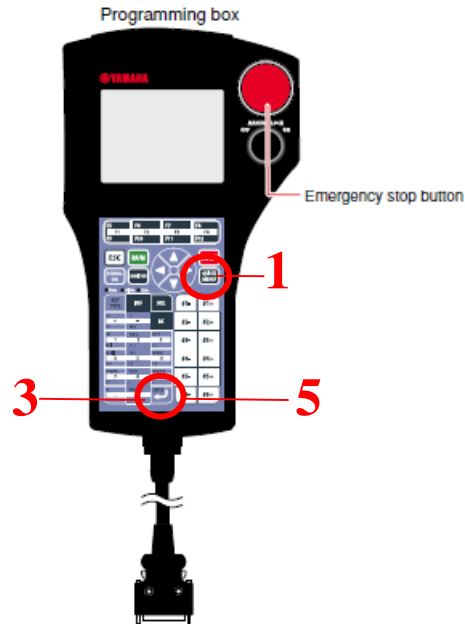


1. Press QUICK MENU key
2. Cursor to Alarm Reset
3. Press Enter key
4. Cursor to YES
5. Press Enter key

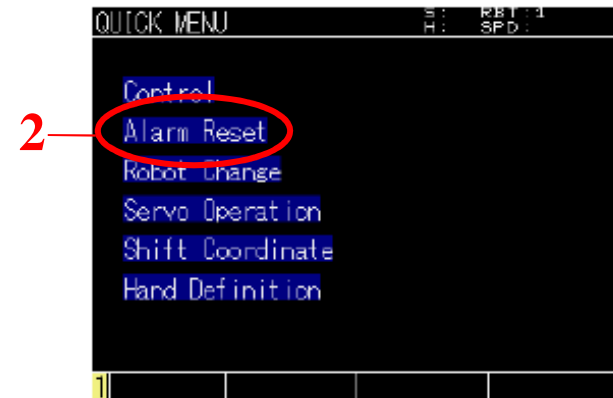


Alarm reset confirmation screen

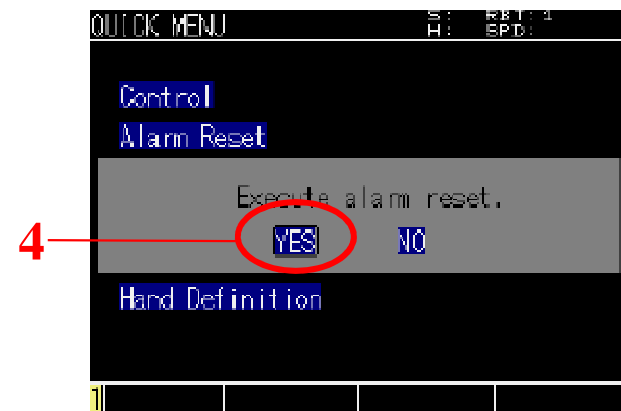


Servo Power

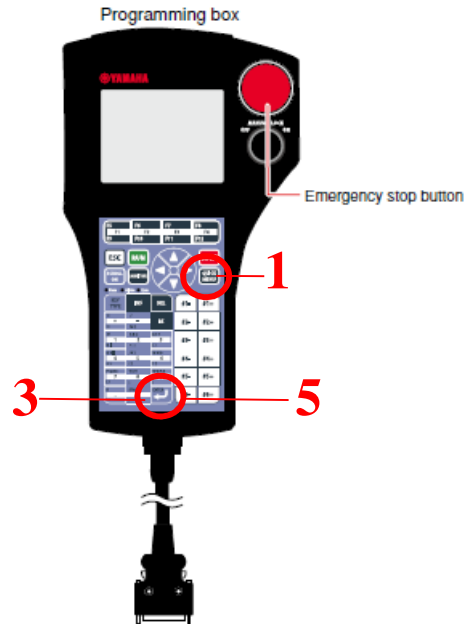


1. Press QUICK MENU key
2. Cursor to Servo Operation
3. Press Enter key
4. Cursor to any option
5. Press Enter key

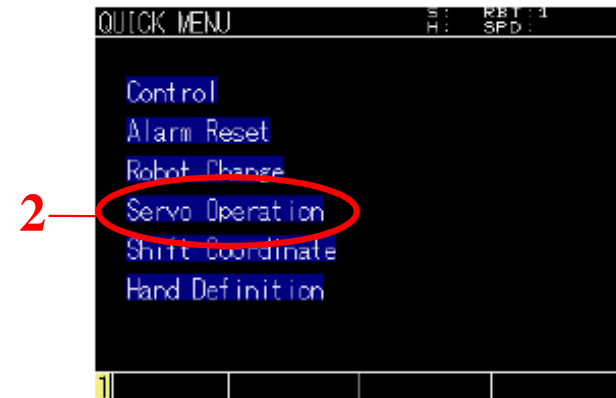


"SERVO OPERATION (ALL)" screen

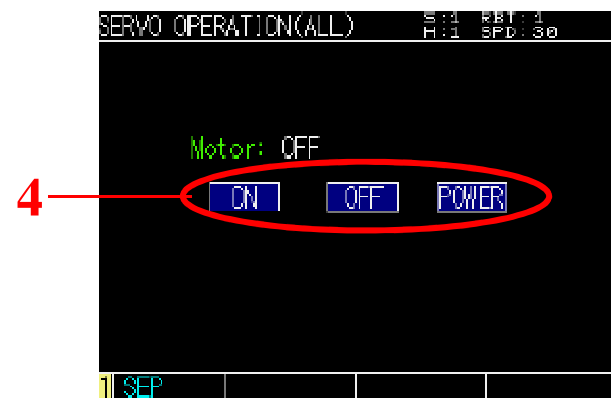




Origin Return

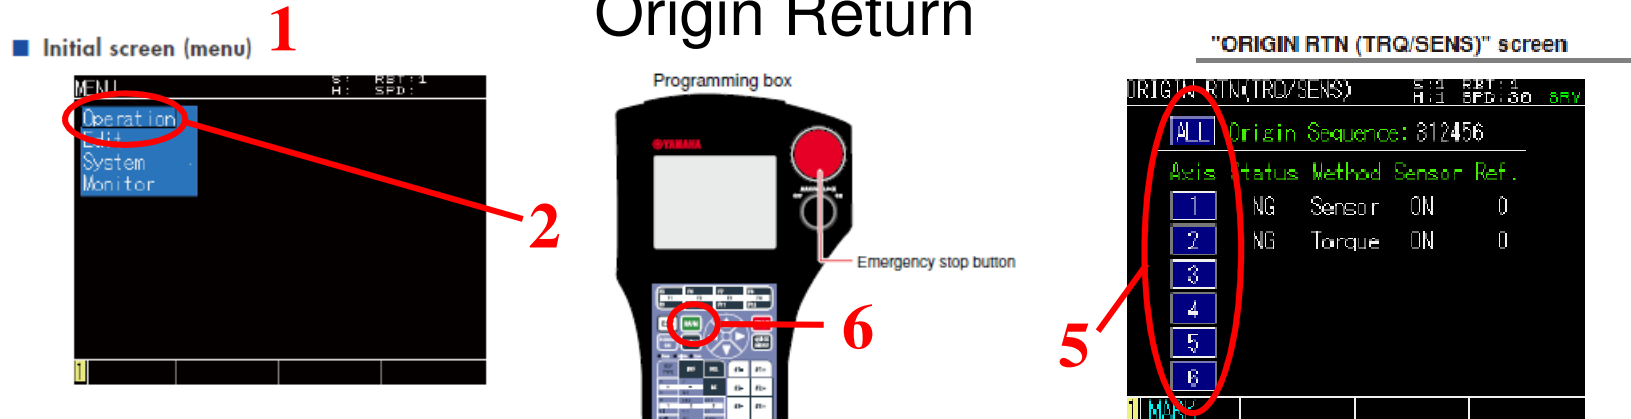

1. Go to Initial screen
2. Cursor to Operation
3. Press Enter key
4. Cursor to Origin Return and press Enter key
5. Cursor to any option and press Enter key
6. Press the **green** RUN key to execute
7. Press the Enter key when completed

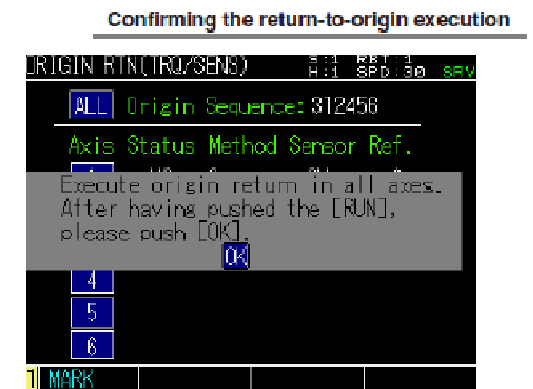

Jogging the Robot in MANUAL Mode

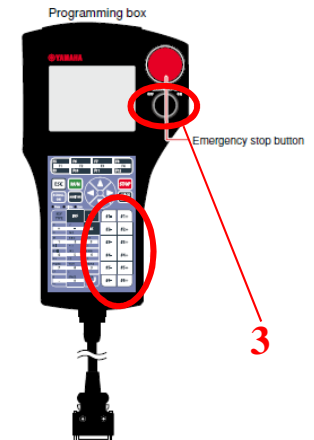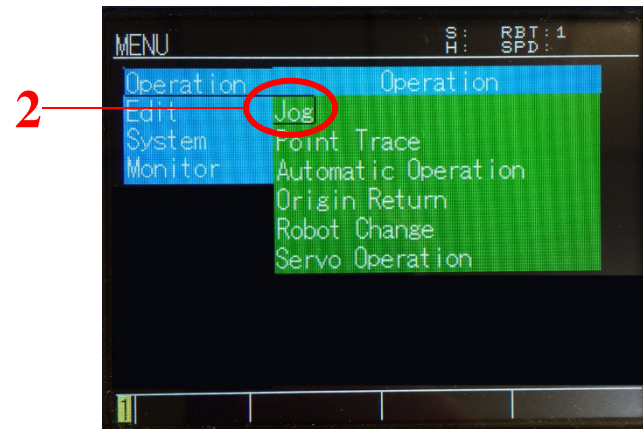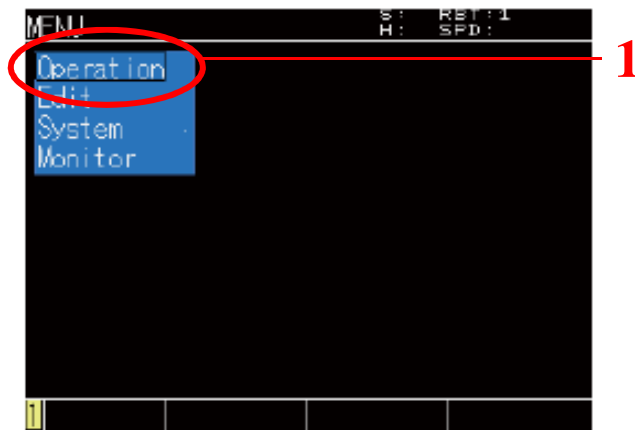

- | | |
|-----|---|
| #1+ | : Moves axis 1 in the + direction or the SCARA robot in the +X direction on the XY coordinates. |
| #1- | : Moves axis 1 in the - direction or the SCARA robot in the -X direction on the XY coordinates. |
| #2+ | : Moves axis 2 in the + direction or the SCARA robot in the +Y direction on the XY coordinates. |
| #2- | : Moves axis 2 in the - direction or the SCARA robot in the -Y direction on the XY coordinates. |
| #3+ | : Moves axis 3 in the + direction. |
| #3- | : Moves axis 3 in the - direction. |
| #4+ | : Moves axis 4 in the + direction. |
| #4- | : Moves axis 4 in the - direction. |
| #5+ | : Moves axis 5 in the + direction |
| #5- | : Moves axis 5 in the - direction. |

1. From the Initial screen, select Operation and Press Enter key
2. In the Operation menu select Jog and Press Enter key
3. Switch Manual Lock to ON