

Error Messages

1.1.2 Alarm classification number list

Error code	Type	Level	Axis operation In case of error	History	LED display	Reset method	Example
0	Correct	-	-	-	×	-	-
1 to 199	Message	-	-	-	×	Operation restart	HALT, HOLD, break point
200 to 299		-	-	Save	×		CPU start
300 to 399	Operation error	-	Individual operation stop		×	Corresponding operation restart	No point
400 to 499		-	Operation stop		Display		Reset command
500 to 599	External error	Level 3	Operation stop			PIO24V off, SIO link error	
600 to 699		Level 2	Servo brake				
700 to 799	Internal error	Level 3	Operation stop			Fan error	
800 to 899		Level 2	Servo brake			Overload	
900 to 999		Level 1	Immediate servo off			System restart	Over-current, driver communication failure

17.800: C1M3

Axis

Message

Error classification

Error Group

Error number